


PharmaPOS Guide to Printer Settings

OKI C310dn / C510dn

	PAGE
Shelf-Talkers 203mm x75mm	1 - 3
Banners 900mm x 210mm	4 - 5
A4 (Posters, Offer Stickers)	6 - 7
A4 Landscape (End Cap, Data strips)	8 - 9
A4 double-sided (Loyalty Cards)	10 - 11
A5 Signs	12 - 13
A5 Double Sided (Flyers)	14 - 15
A3 Posters (Prints on TWO A4 Pages)	16 - 17

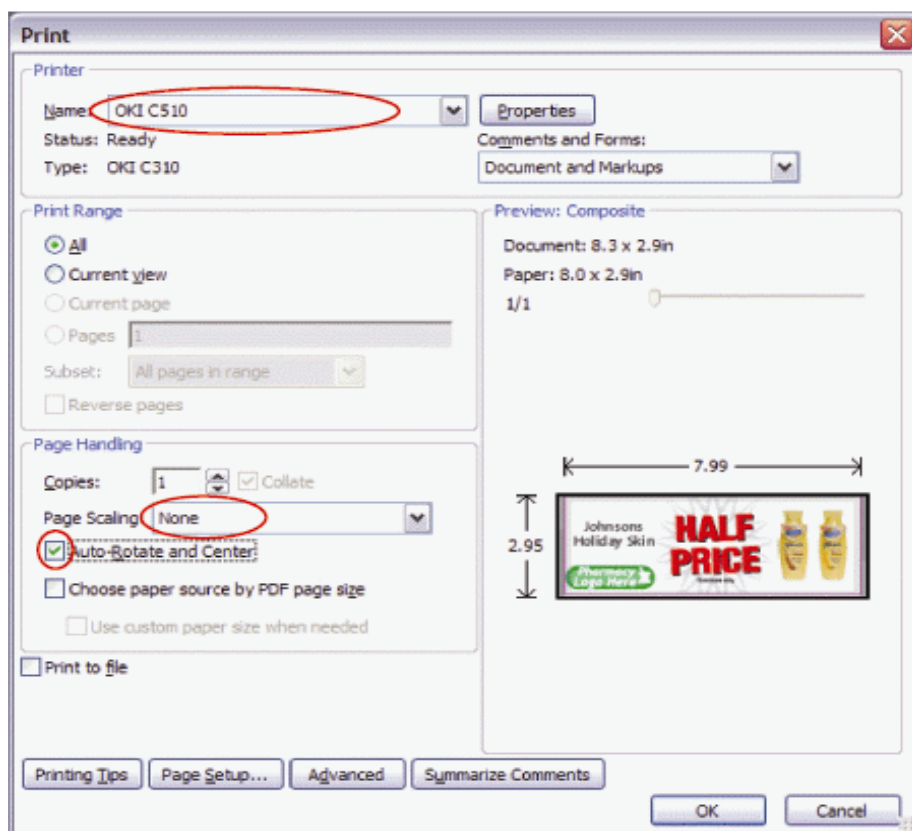


Shelf-Talkers:

1. Select OKI Printer
2. Change Page Scaling to None
3. Tick Auto-Rotate and Centre
4. Go to Properties

Shelf-Talkers:

From the **Setup** tab:


- Media **Size** - select **User Defined** from the drop down menu

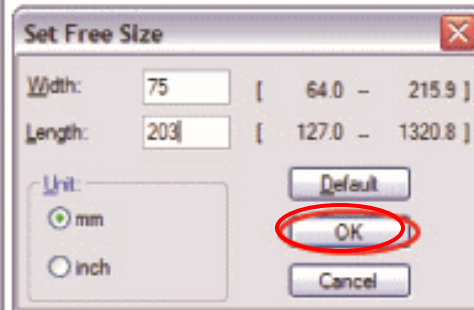

- Change width to 75mm, length to 203mm and then click OK

- Media **Source** - select **Multipurpose Tray** from the drop down menu
- Go to Job Options tab



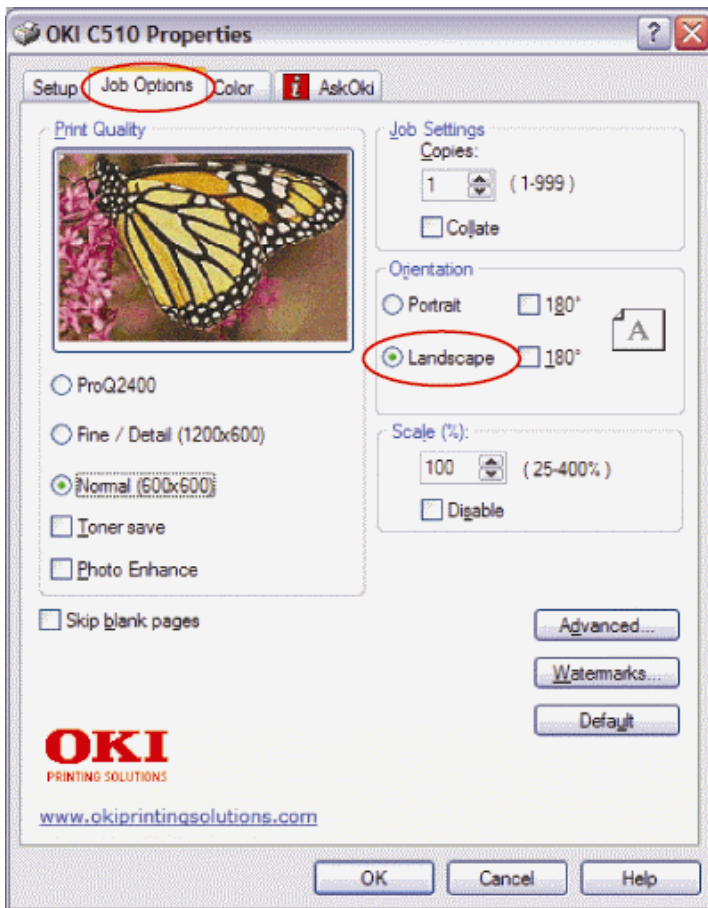

Shelf-Talkers:

From the **Job Options** tab:

9. Orientation - select **Landscape**
10. Go to Setup Tab




From the **Setup** tab:

11. Click the Save button
12. Name the saved settings
13. Tick Include media settings
14. Click OK
15. Click OK out of Properties
16. Click OK to Print

Note:

All saved settings can be found in the Driver Settings drop down menu

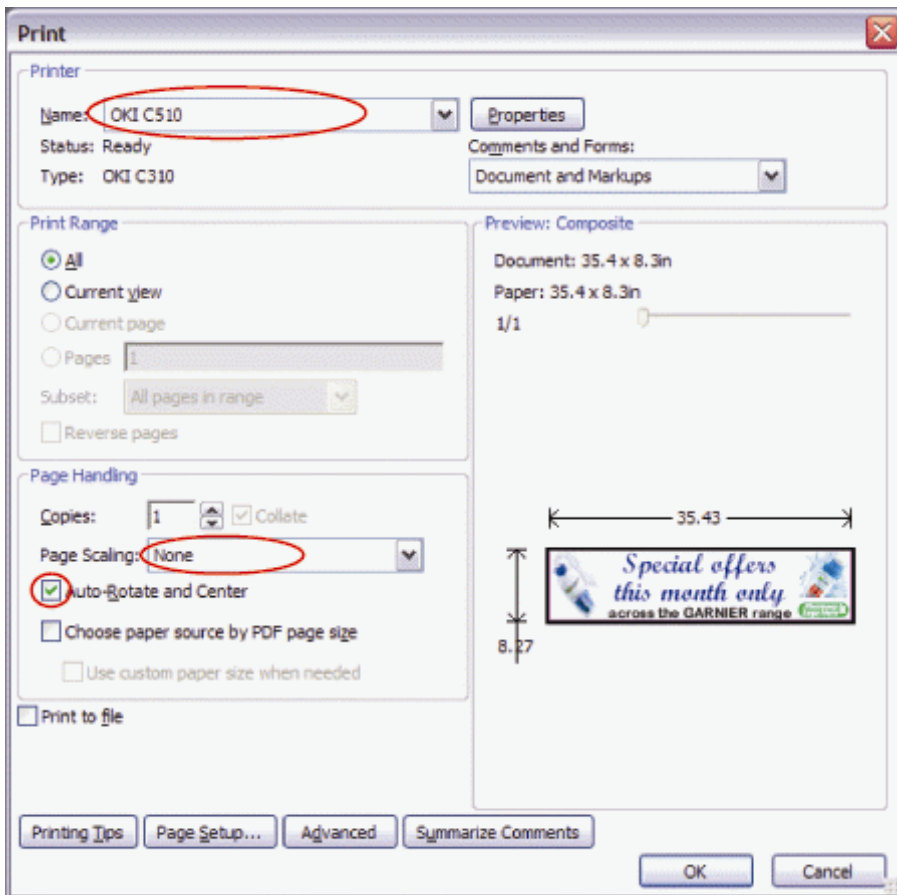


Banners:

1. Select OKI Printer
2. Change Page Scaling to None
3. Tick Auto-Rotate and Centre
4. Go To Properties



From the **Setup** tab:


5. Media **Size** - select **Banner 210mm x 900mm**
6. Media **Source** - select **Multipurpose Tray** from the drop down menu
7. Go To Job Options tab

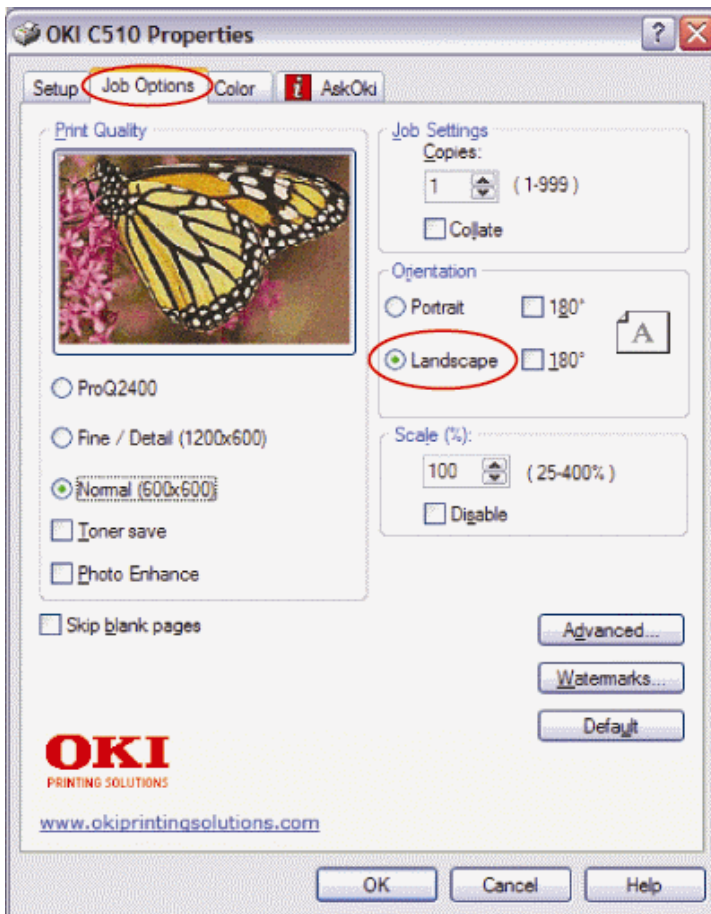

Banners:

From the **Job Options** tab:

8. Orientation - select **Landscape**
9. Go to Setup Tab

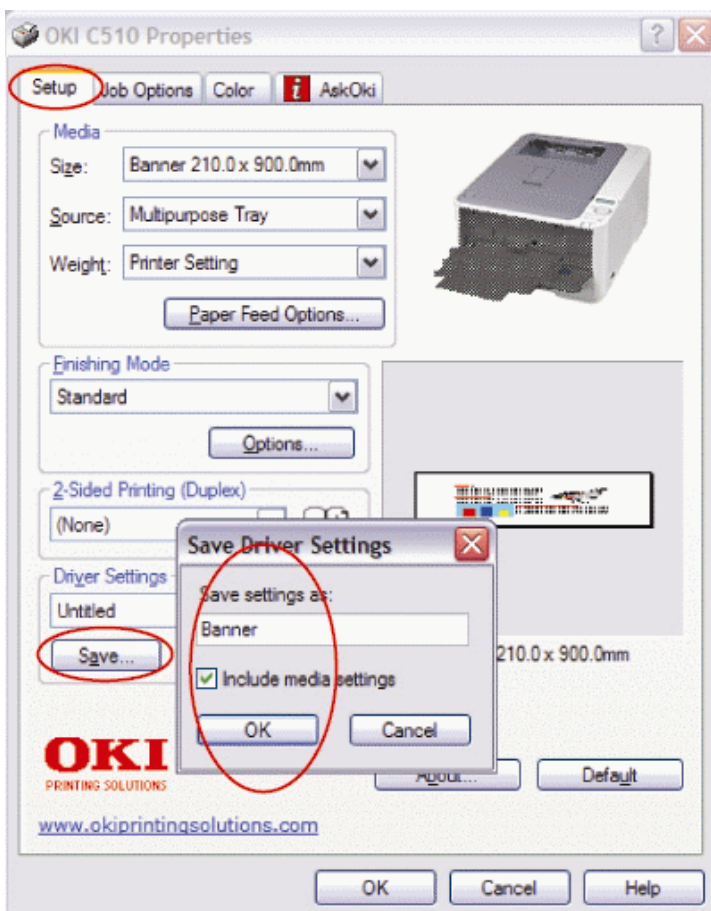


From the **Setup** tab:

10. Click the Save button
11. Name the saved settings
12. Tick Include media settings
13. Click OK
14. Click OK out of Properties
15. Click OK to Print

Note:

All saved settings can be found in the Driver Settings drop down menu

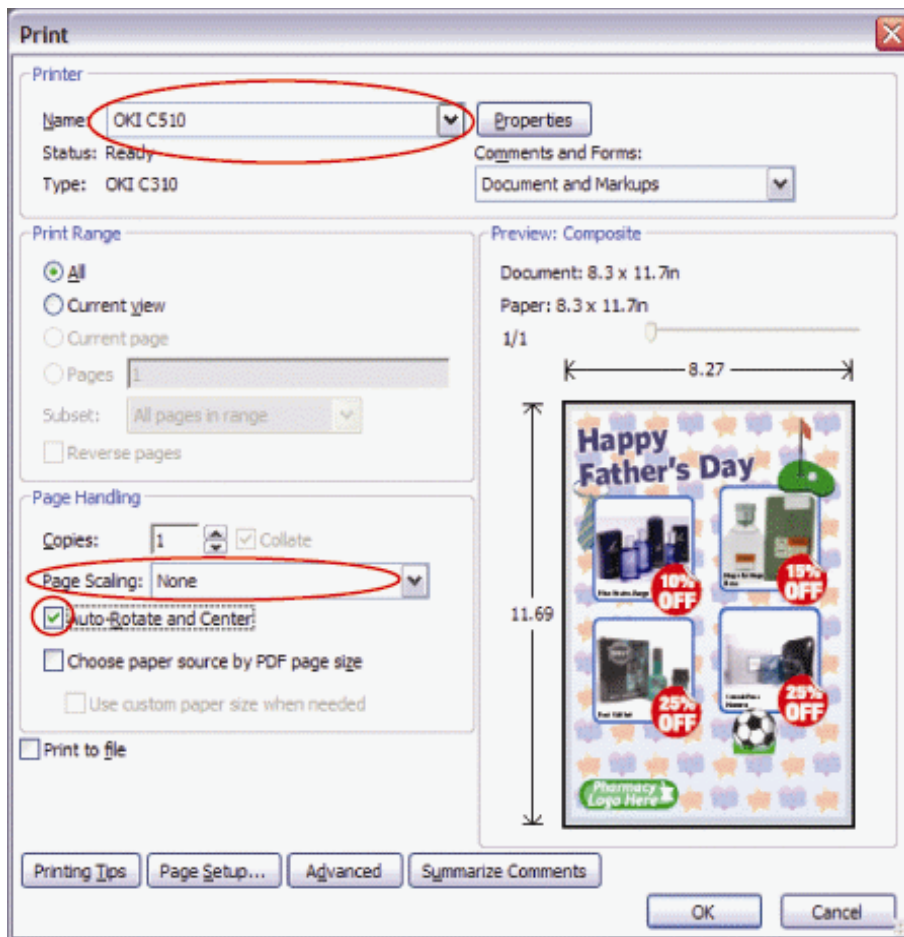
**A4:**

1. Select OKI Printer
2. Change Page Scaling to None
3. Tick Auto-Rotate and Centre
4. Go To Properties



From the **Setup** tab:

5. Media **Size** - select **A4 210m x 297mm**
6. Media **Source** - select **Tray 1** from the drop down menu
7. Go To Job Options tab

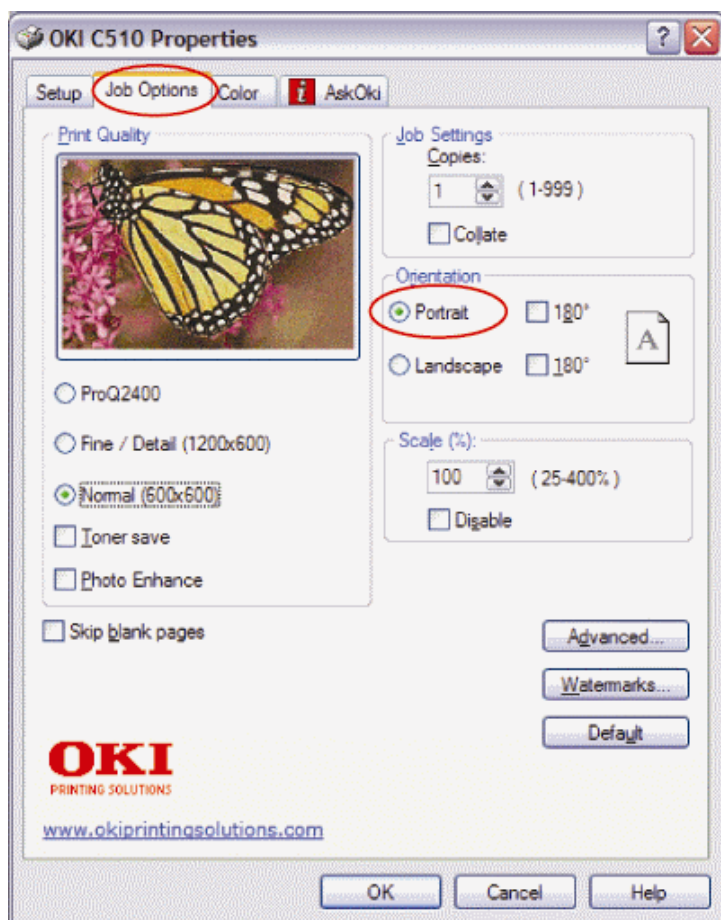A4:

From the **Job Options** tab:

8. Orientation - select **Portrait**
9. Go to Setup Tab




From the **Setup** tab:

10. Click the Save button
11. Name the saved settings
12. Tick Include media settings
13. Click OK
14. Click OK out of Properties
15. Click OK to Print

Note:

All saved settings can be found in the Driver Settings drop down menu

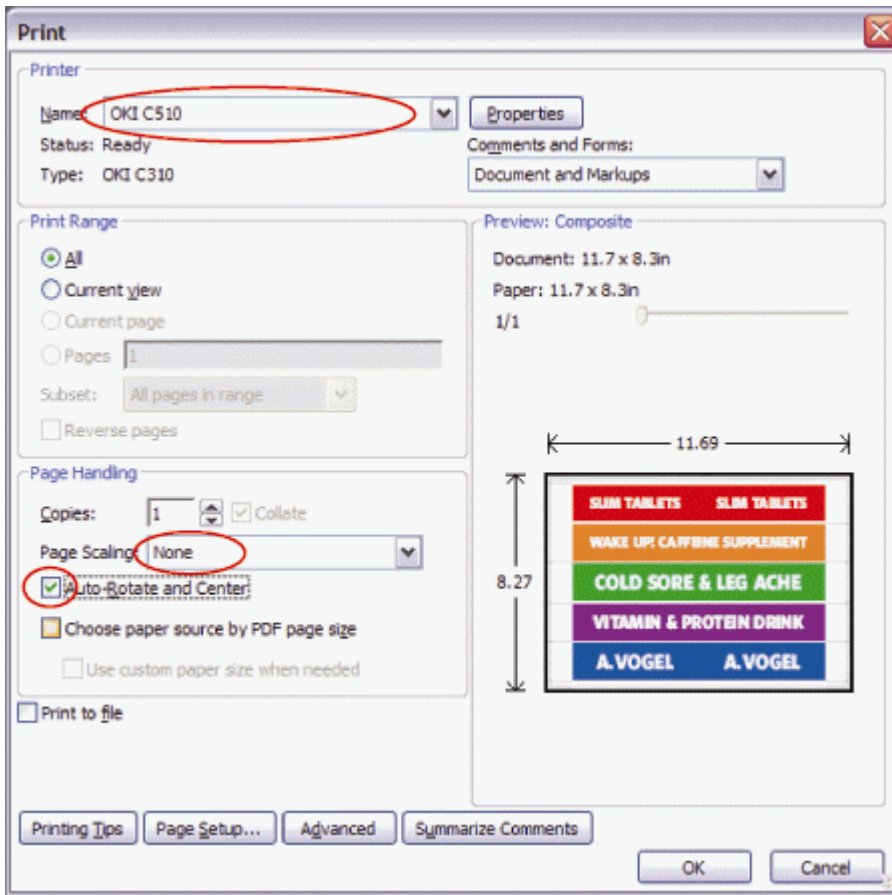


A4 Landscape:

1. Select OKI Printer
2. Change Page Scaling to **None**
3. Tick Auto-Rotate and Centre
4. Go To Properties



From the **Setup** tab:


5. Media **Size** - select **A4 210mm 297mm**
6. Media **Source** - select **Tray 1** from the drop down menu
7. Go To Job Options tab

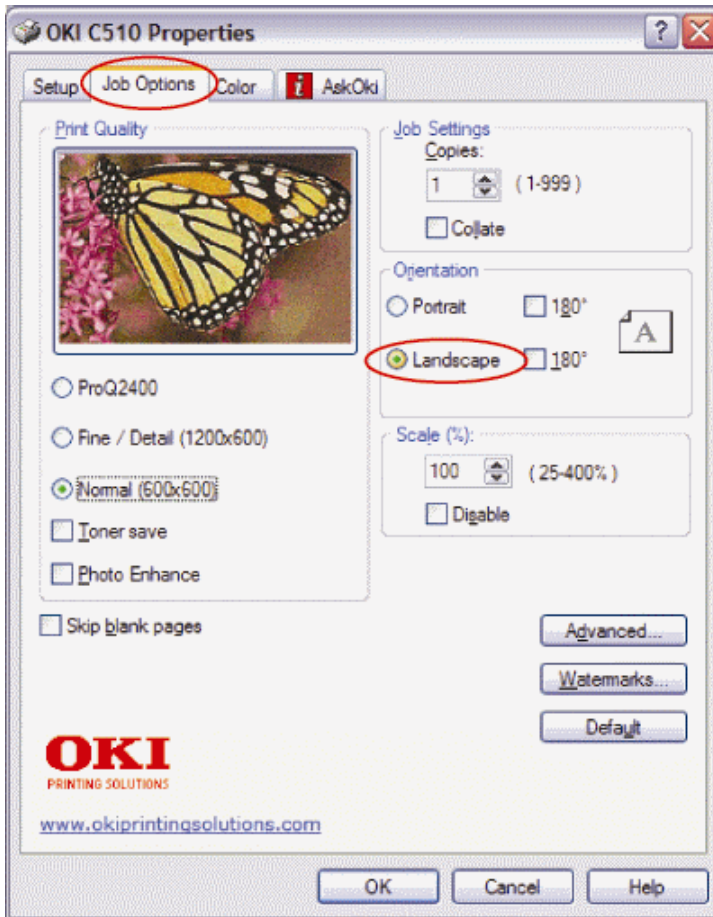

A4 Landscape:

From the **Job Options** tab:

8. Orientation - select **Landscape**
9. Go to Setup Tab

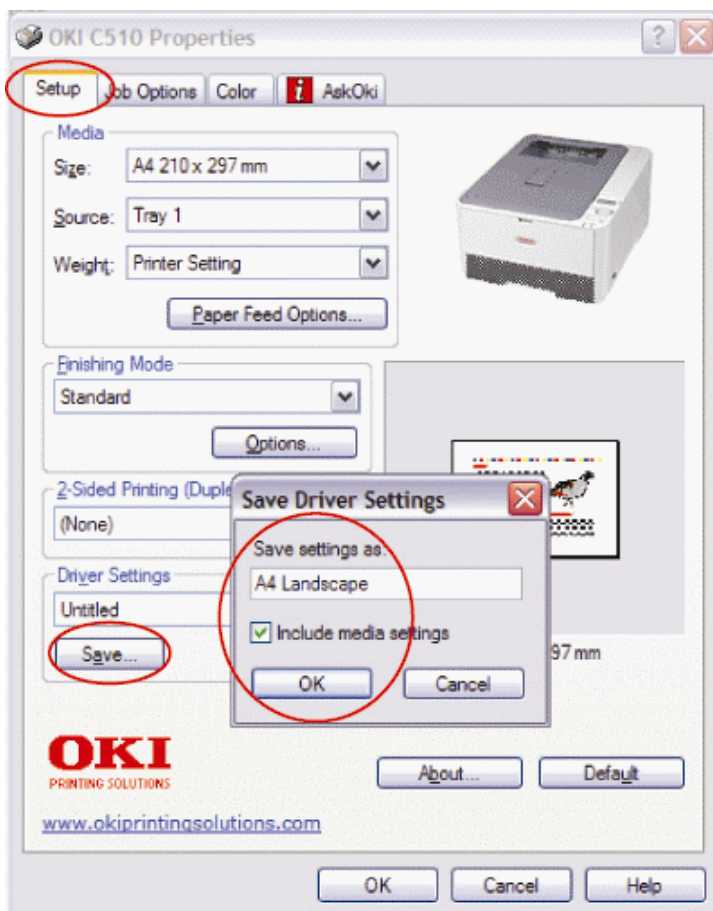


From the **Setup** tab:

10. Click the Save button
11. Name the saved settings
12. Tick Include media settings
13. Click OK
14. Click OK out of Properties
15. Click OK to Print

Note:

All saved settings can be found in the Driver Settings drop down menu

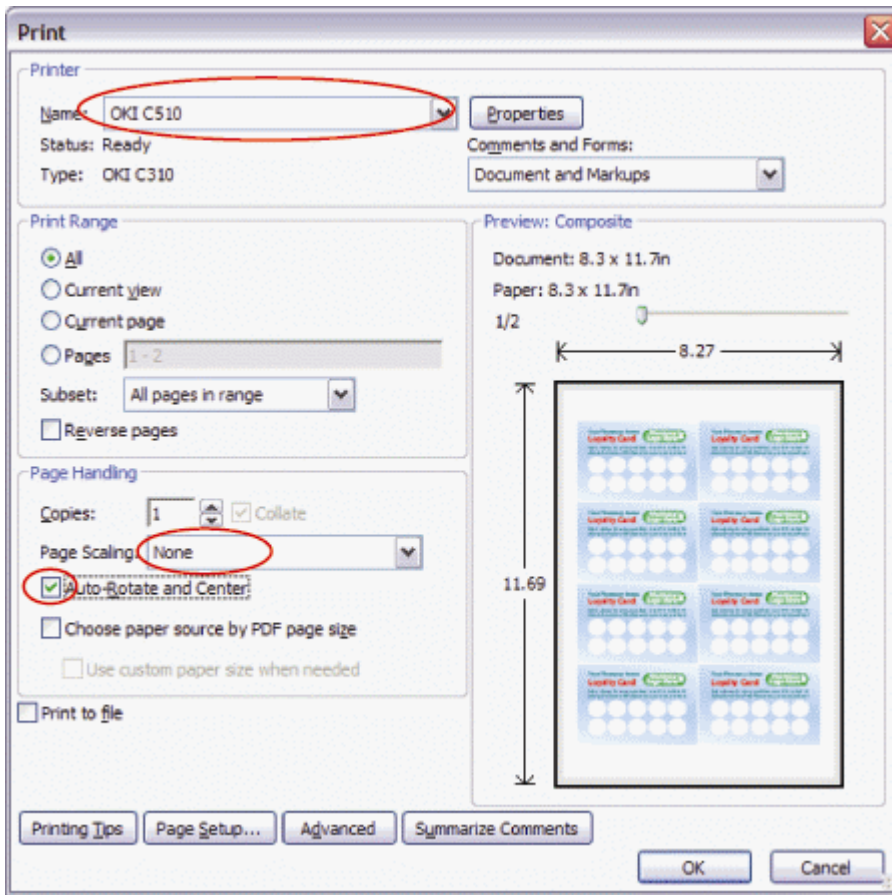


A4 double-sided:

1. Select OKI Printer
2. Change Page Scaling to **None**
3. Tick Auto-Rotate and Centre
4. Go To Properties



From the **Setup** tab:

5. Media **Size** - select **A4 210mm x 297mm**
6. Media **Source** - select **Tray 1** from the drop down menu
7. 2-Sided Printing (Duplex) - select **Long Edge** from the drop down menu
8. Go To Job Options tab

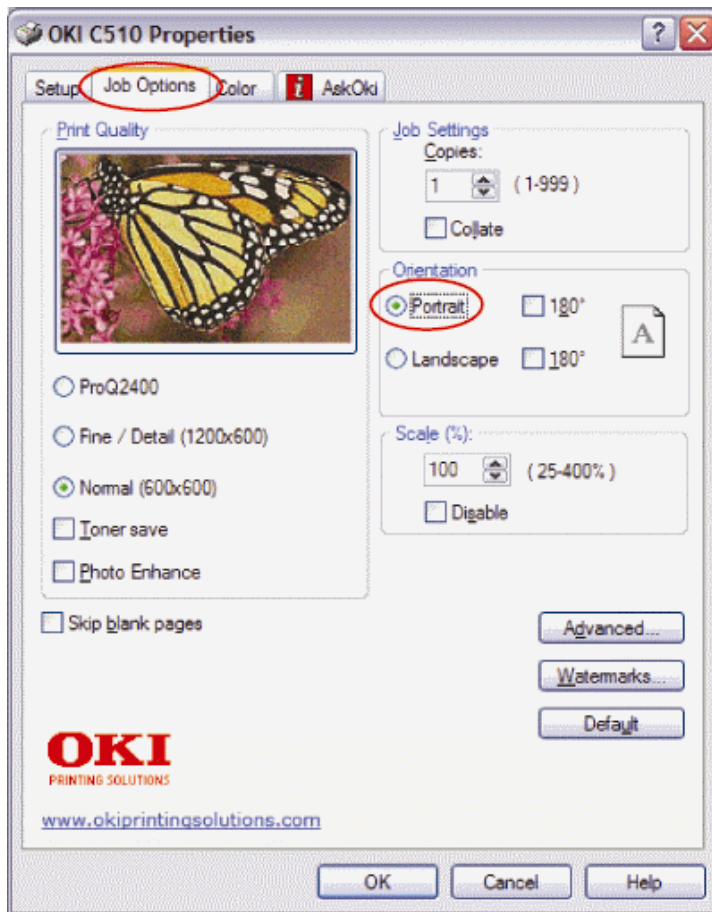

A4 double-sided:

From the **Job Options** tab:

9. Orientation - select **Portrait**
10. Go to Setup Tab




From the **Setup** tab:

11. Click the Save button
12. Name the saved settings
13. Tick Include media settings
14. Click OK
15. Click OK out of Properties
16. Click OK to Print

Note:

All saved settings can be found in the Driver Settings drop down menu

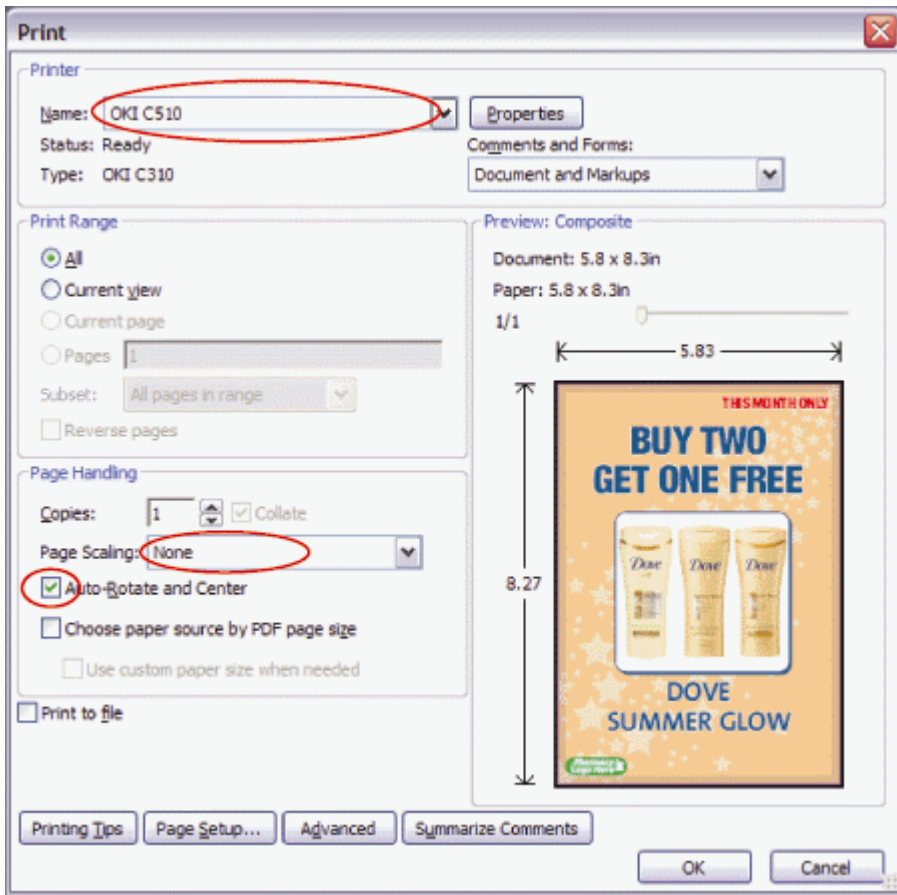
**A5:**

1. Select OKI Printer
2. Change Page Scaling to **None**
3. Tick Auto-Rotate and Centre
4. Go To Properties



From the **Setup** tab:

5. Media **Size** - select **A5 148mm x 210mm**
6. Media **Source** - select **Multipurpose Tray** from the drop down menu
7. Go To Job Options tab

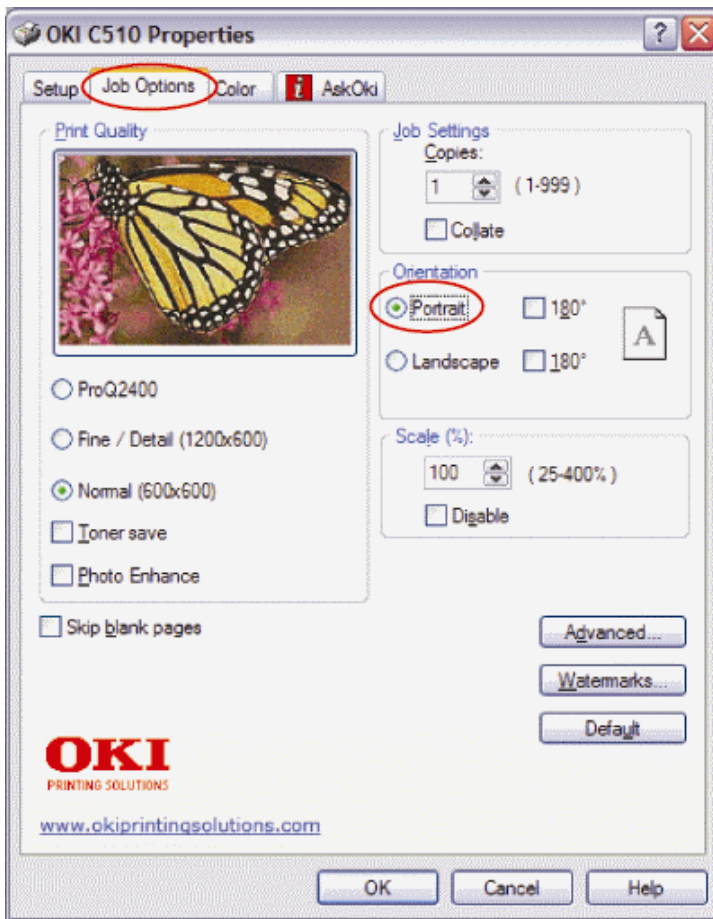

A5:

From the **Job Options** tab:

8. Orientation - select **Portrait**
9. Go to Setup Tab




From the **Setup** tab:

10. Click the Save button
11. Name the saved settings
12. Tick Include media settings
13. Click OK
14. Click OK out of Properties
15. Click OK to Print


Note:

All saved settings can be found in the Driver Settings drop down menu

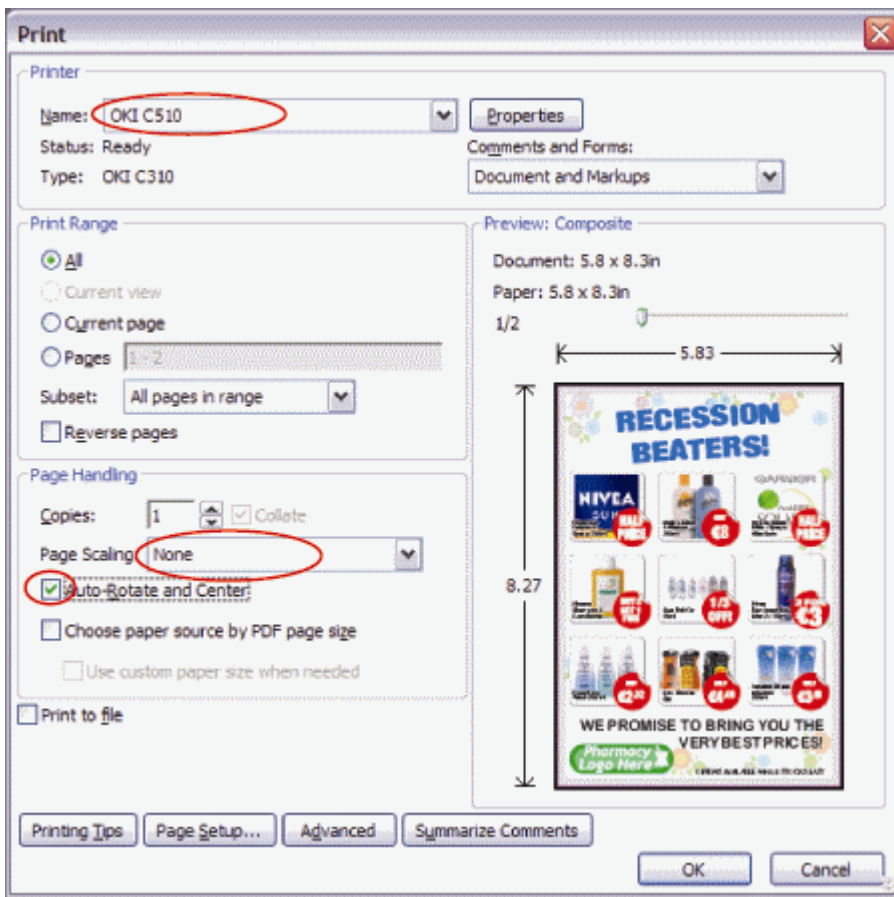


A5 double-sided:

1. Select OKI Printer
2. Change Page Scaling to **None**
3. Tick Auto-Rotate and Centre
4. Go To Properties

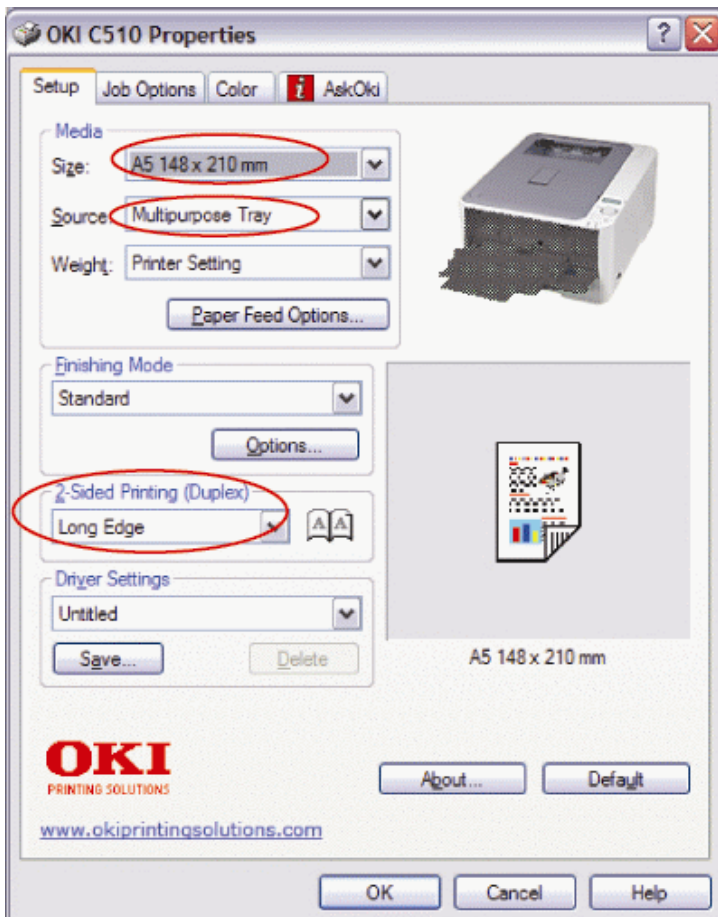

From the **Setup** tab:


5. Media **Size** - select **A5 148mm x 210mm**
6. Media **Source** - select **Multipurpose Tray** from the drop down menu
7. 2-Sided Printing (Duplex) - select **Long Edge** from the drop down menu
8. Go to Job Options tab

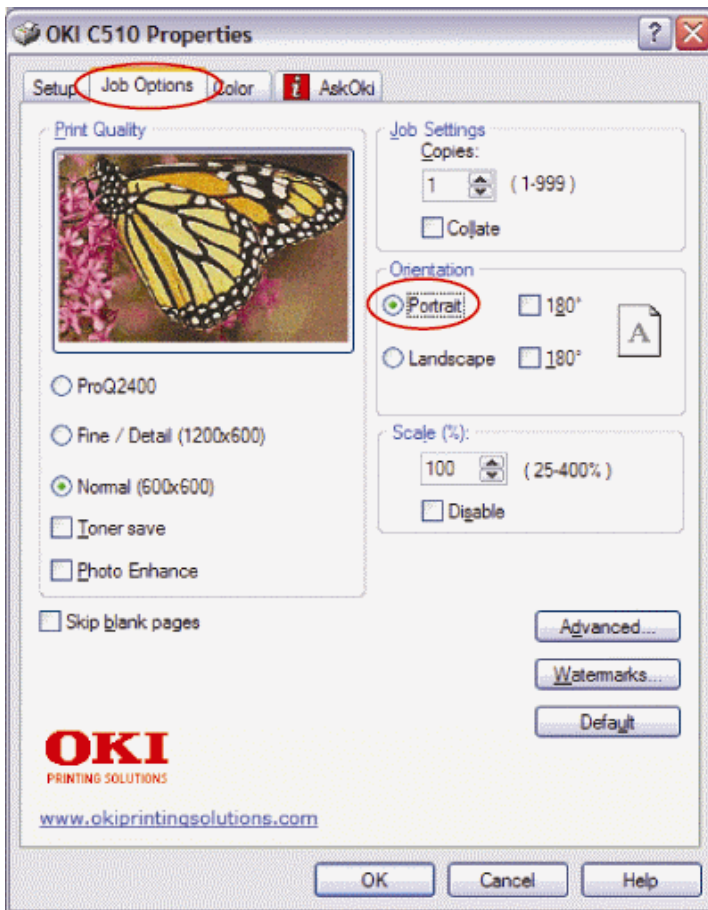

A5 double-sided:

From the **Job Options** tab:

9. Orientation - select **Portrait**
10. Go to Setup Tab

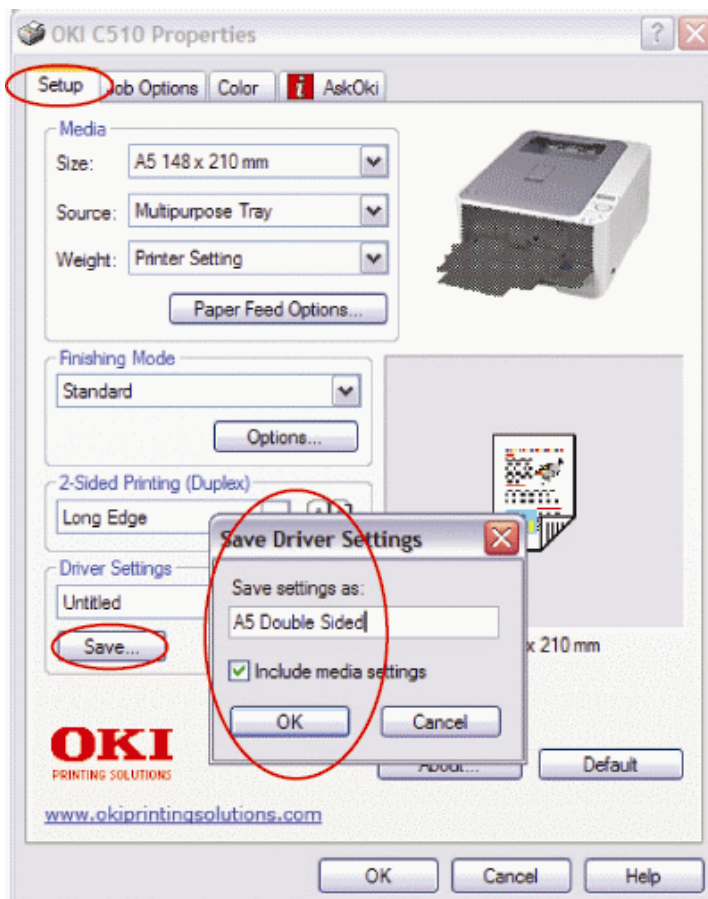


From the **Setup** tab:

11. Click the Save button
12. Name the saved settings
13. Tick Include media settings
14. Click OK
15. Click OK out of Properties
16. Click OK to Print

Note:

All saved settings can be found in the Driver Settings drop down menu

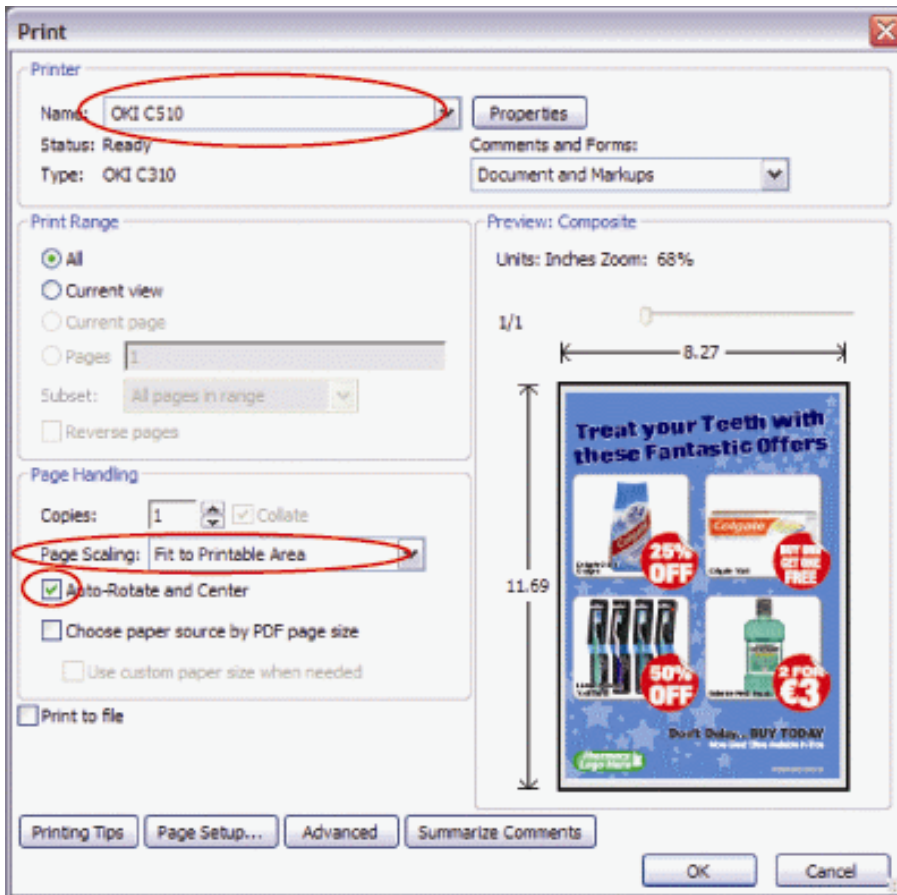
**A3:**

1. Select OKI Printer
2. Change Page Scaling to Fit To Printable Area
3. Tick Auto-Rotate and Centre
4. Go To Properties



From the **Setup** tab:

5. Media **Size** - select **A4 210mm x 297mm**
6. Media **Source** - select **Tray 1** from the drop down menu
7. **Finishing Mode** - select **Poster Print** from the drop down menu
8. Go To Job Options tab

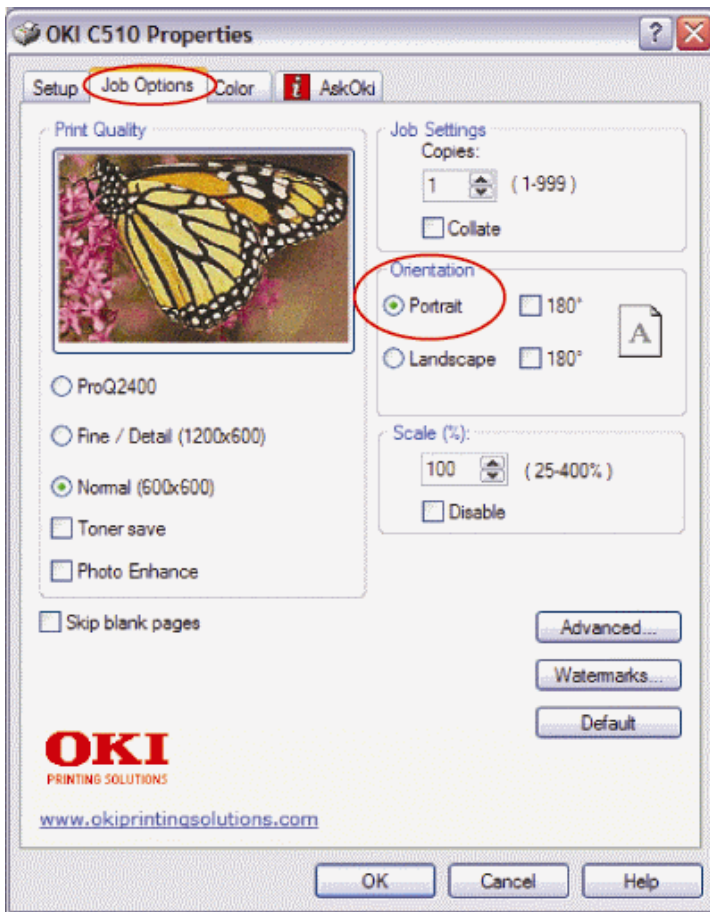**A3:**

From the **Job Options** tab:

9. Orientation - select **Portrait**
10. Go to Setup Tab



From the **Setup** tab:

11. Click the Save button
12. Name the saved settings
13. Tick Include media settings
14. Click OK
15. Click OK out of Properties
16. Click OK to Print

Note:

All saved settings can be found in the Driver Settings drop down menu